
 


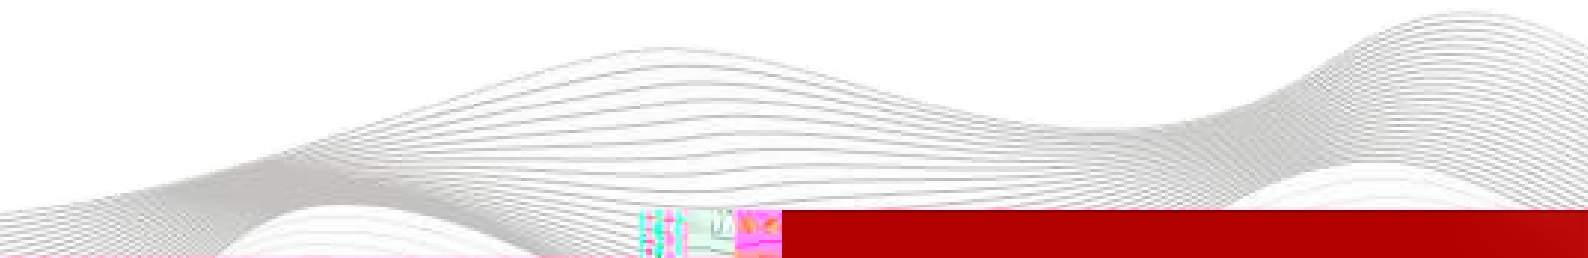


透科自动化



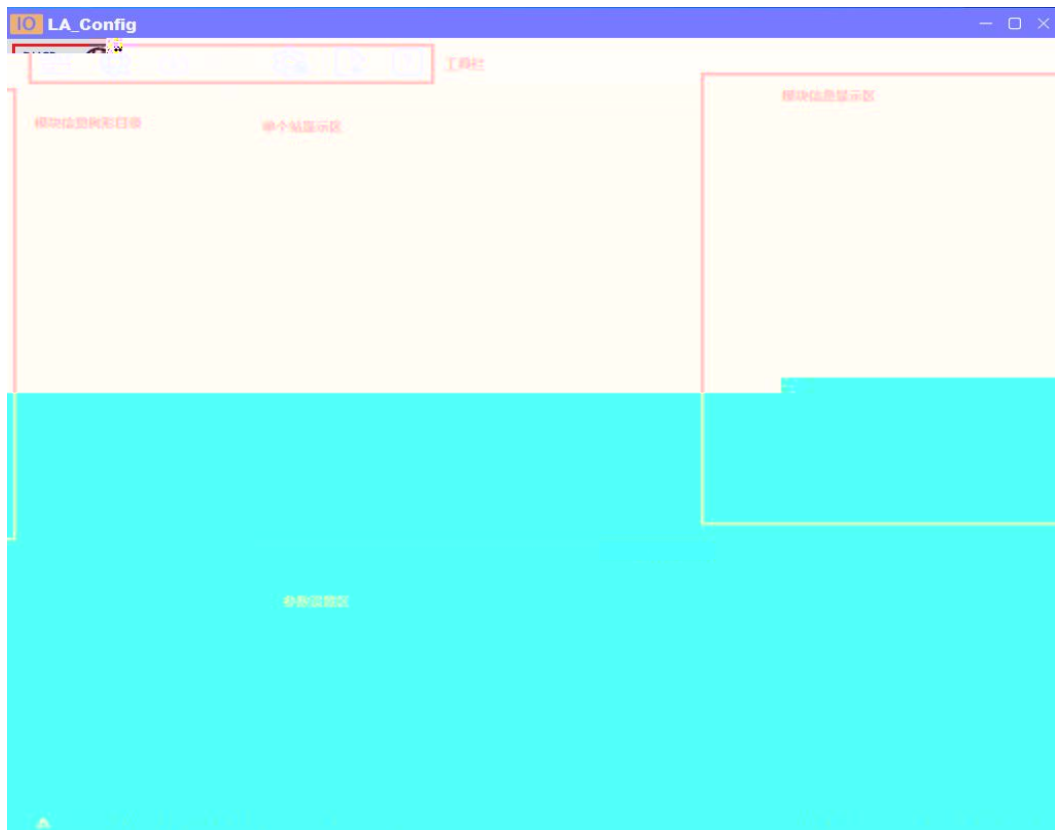

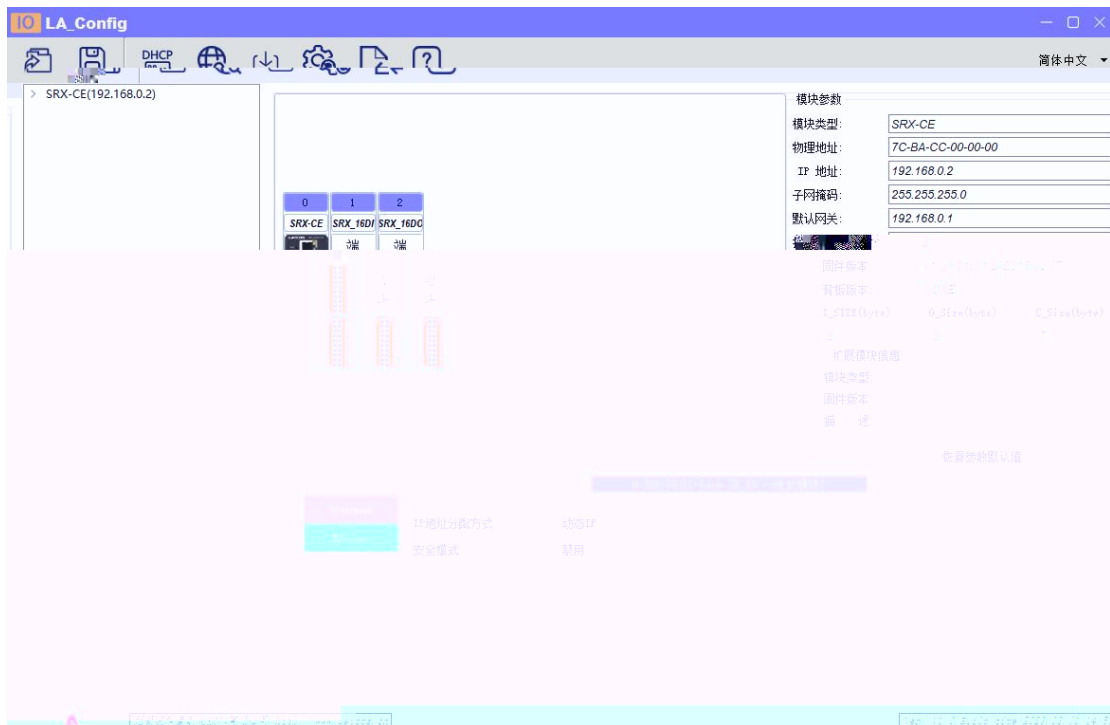

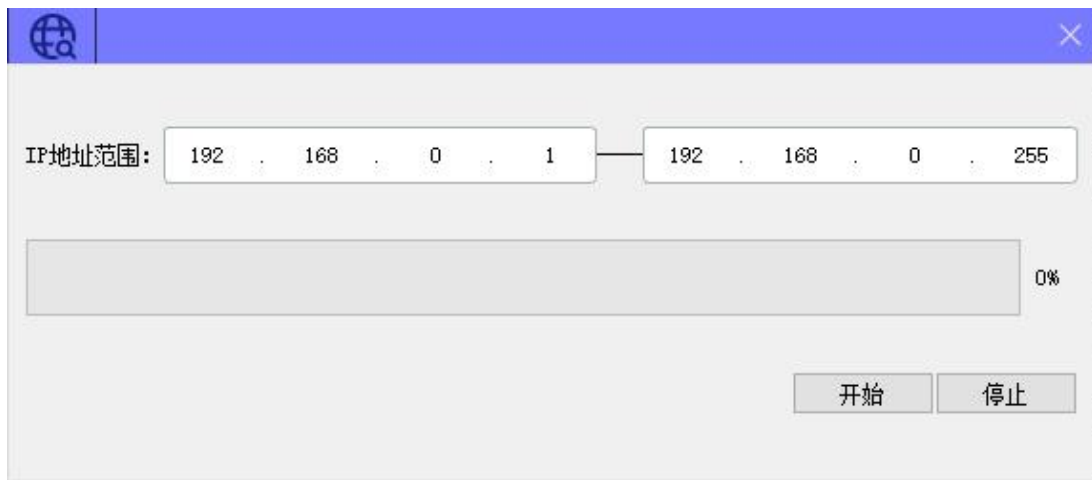

DHCP

	MAC	IP	状态
1	7C : BA : CC : 15 : 82 : 3E	192 . 168 . 0 . 1	未分配

添加MAC
删除MAC

启动服务
关闭服务

加载配置
保存配置

DHCP 启动单 启模块 来源被分配新的IP地址

信息栏



DHCP

	MAC	IP	状态
1	7C : BA : CC : 15 : 82 : 3E	192 . 168 . 0 . 3	分配成功

添加MAC
删除MAC

启动服务
关闭服务


加载配置
保存配置



DHCP 启动单 启模块 来源被分配新的IP地址




信息栏



```




[23-Mar-23 10:50:19] Warning: Interface 192.168.10.19 is not Static, ignored
[23-Mar-23 10:50:19] Lease URL: http://127.0.0.1:6789
[23-Mar-23 10:50:19] Listening On: 192.168.0.211
[23-Mar-23 10:50:20] DHCPREQUEST for 7c:ba:cc:15:82:3e () from interface 1
  
```

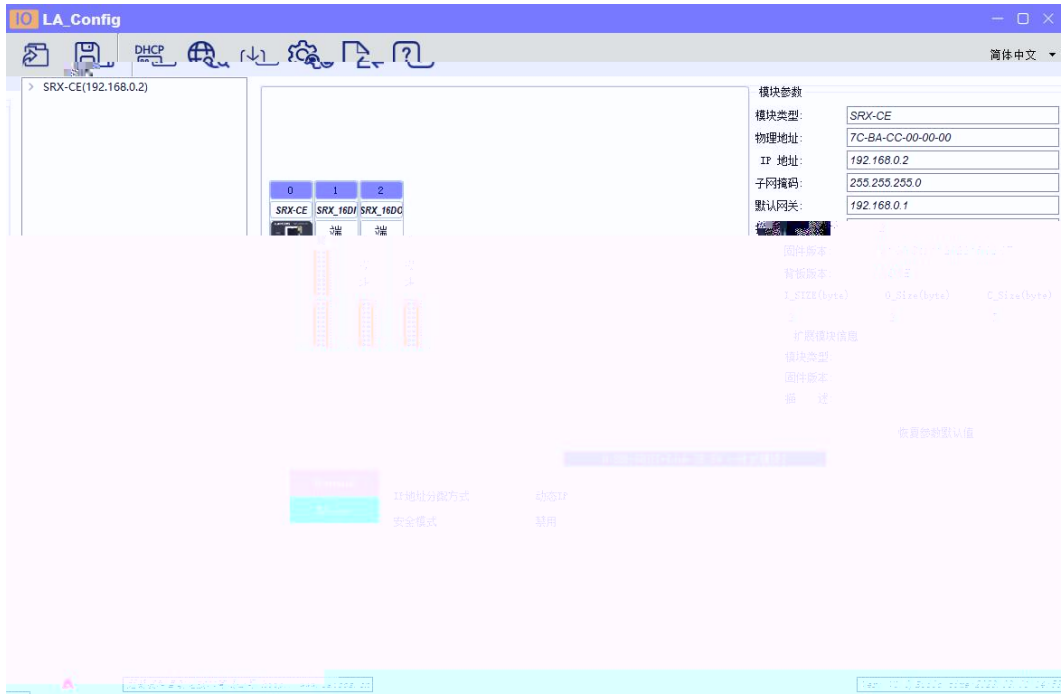

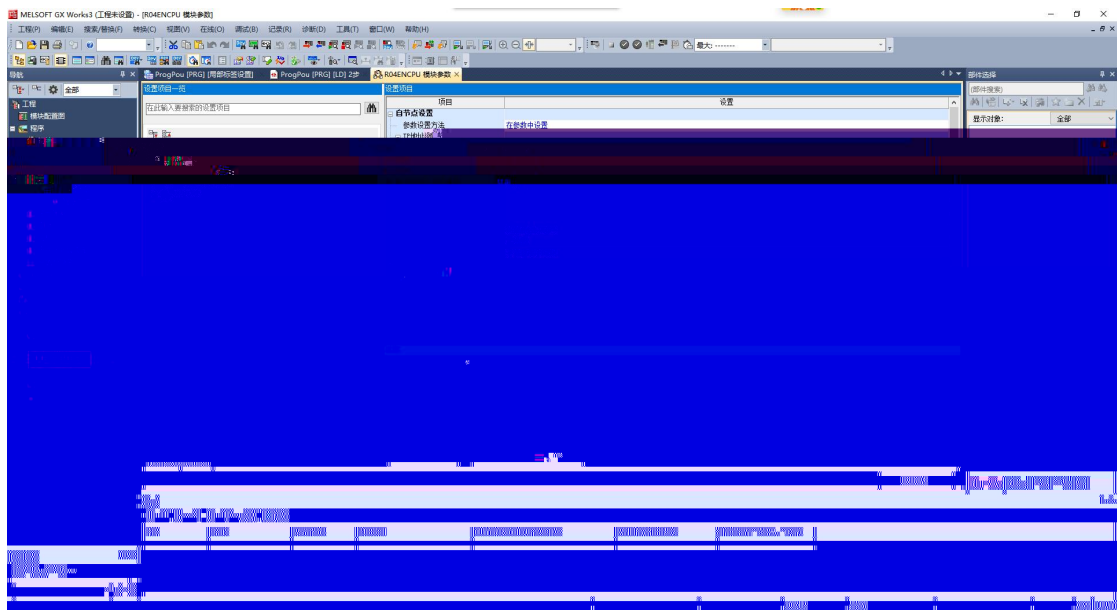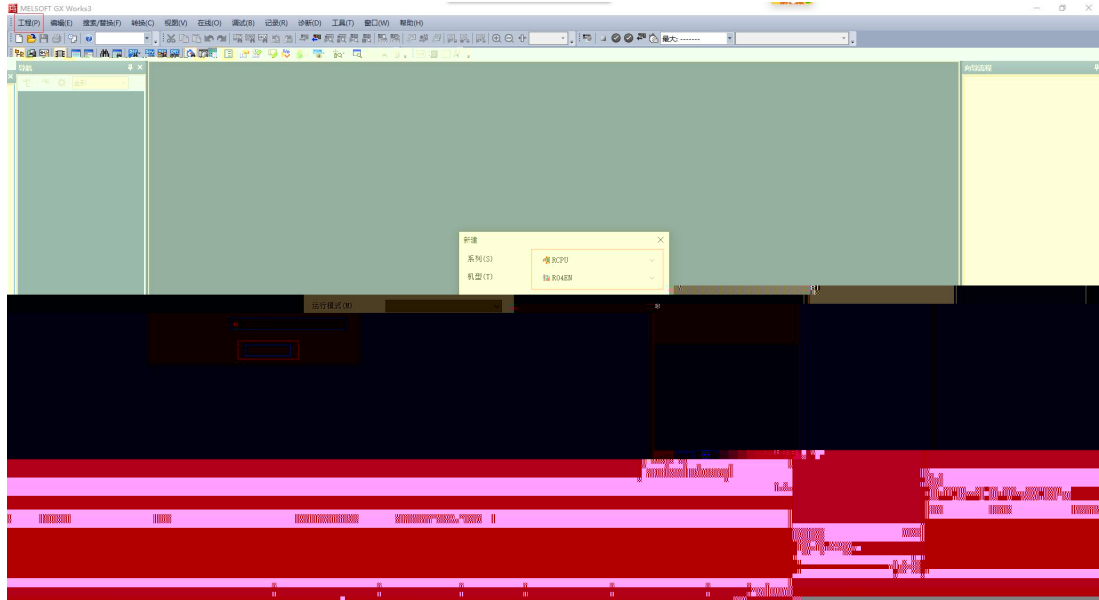

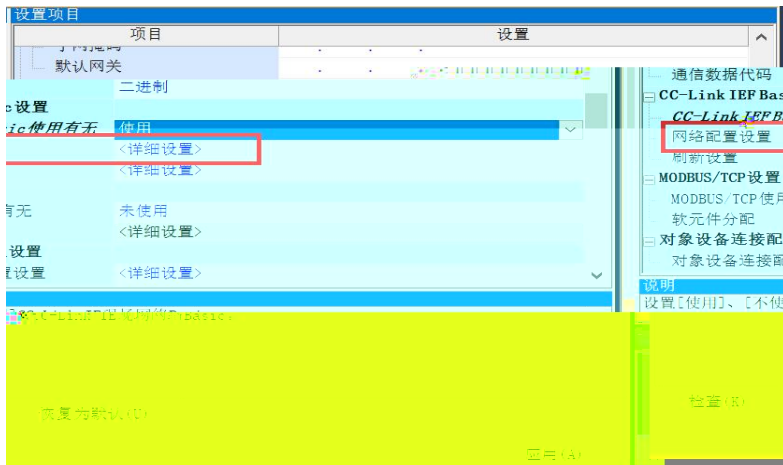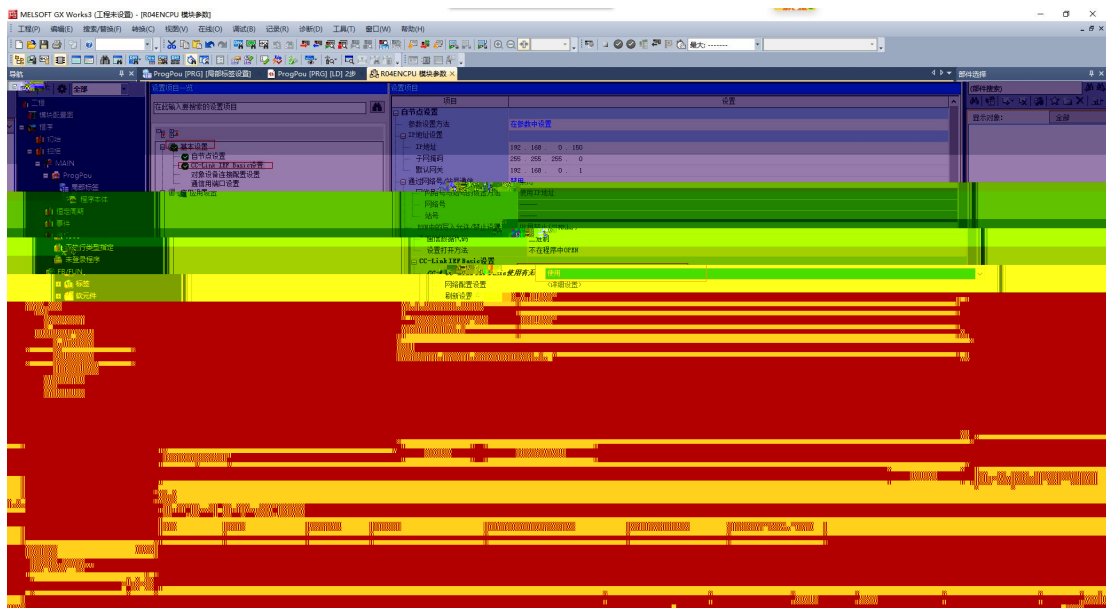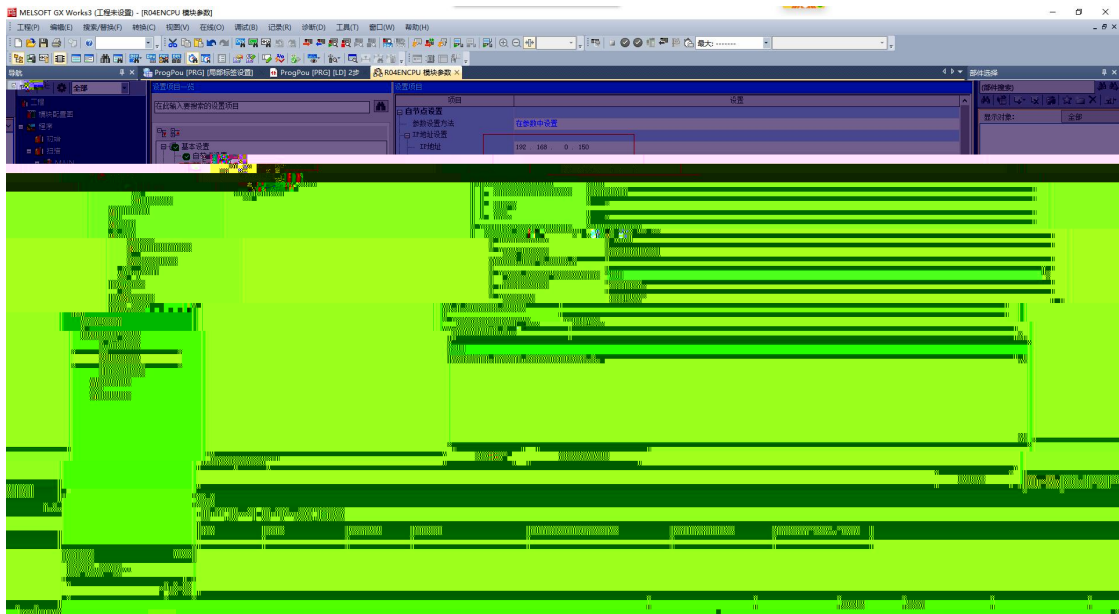

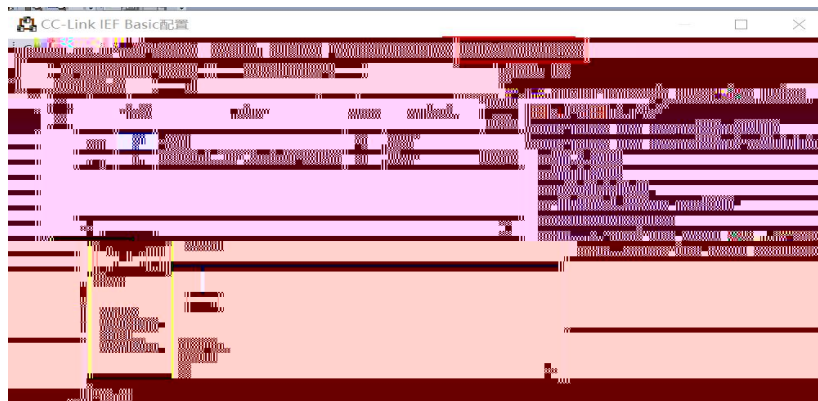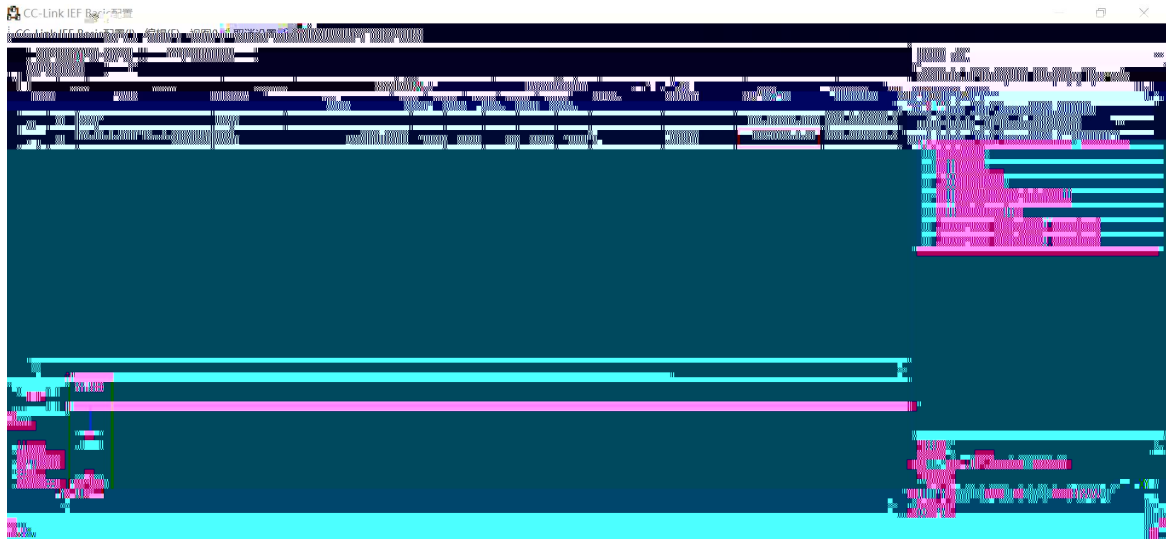

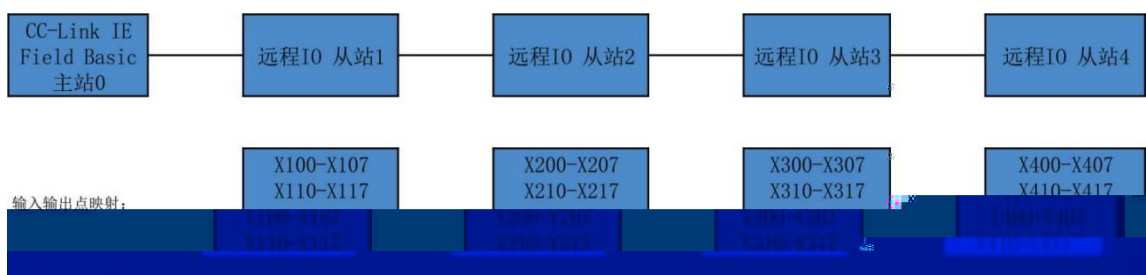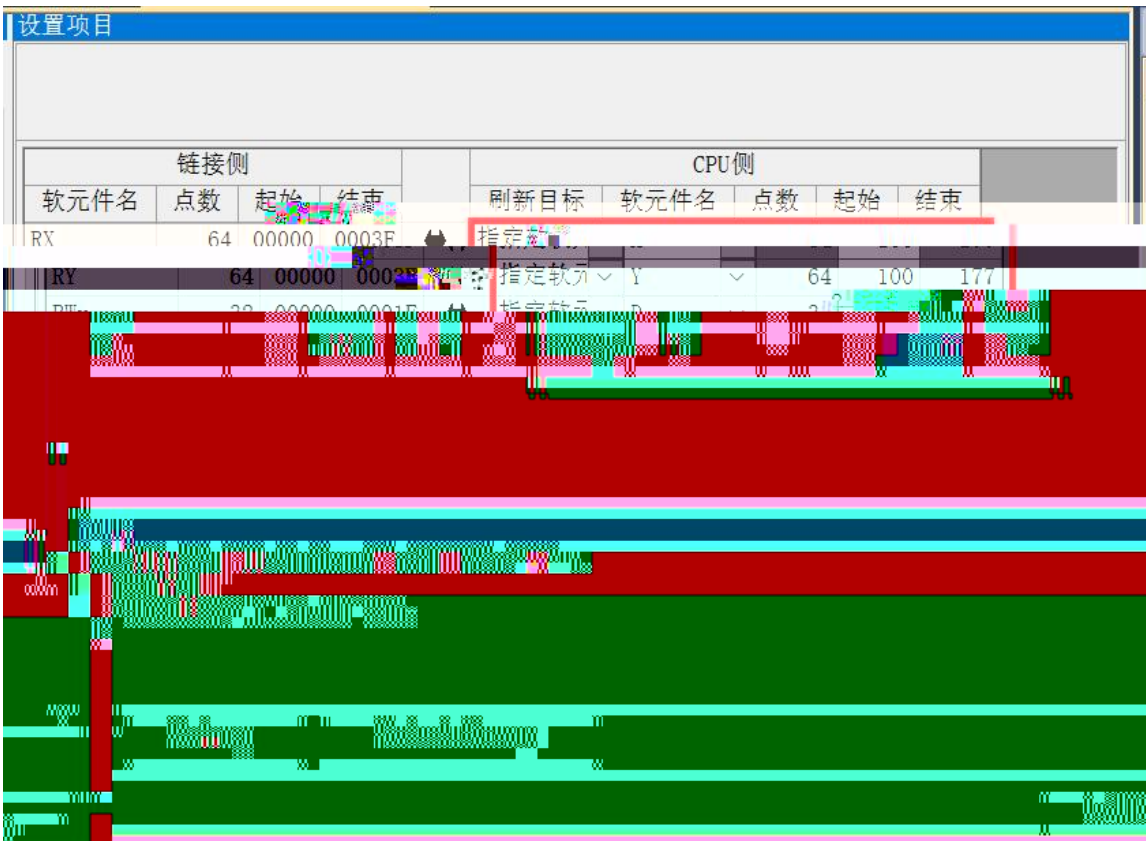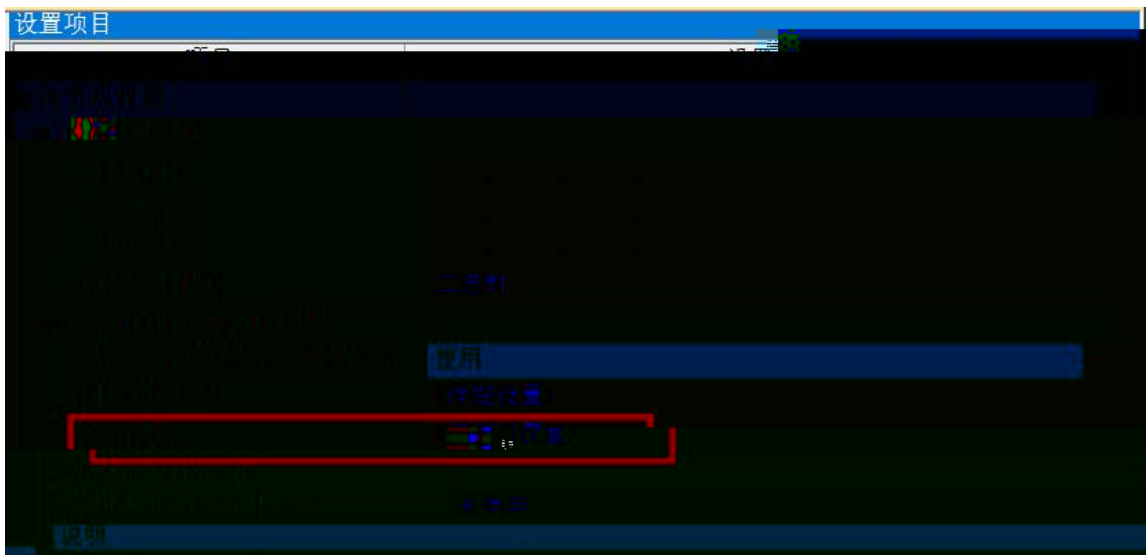

凌科自动化
LATCOS

020-82101000 / 13710421000

